

# edenwood

**2.1ch Sound Bar built-in Subwoofer**

**TB122B**

Instruction Manual

 




# Contents

<b>1. Important Safety Instructions</b>	<b>4</b>
1.1 Safety	4
1.2 Caution	5
1.3 Warning	5
<b>2. What's in the Box</b>	<b>6</b>
<b>3. Identifying the Parts</b>	<b>7</b>
3.1 Main Unit	7
3.2 Remote Control	8
<b>4. Preparations</b>	<b>8</b>
4.1 Prepare the Remote Control	8
4.2 Install/replace the batteries	8
4.3 Precautions Concerning Batteries	8
<b>5. Placement and Mounting</b>	<b>9</b>
5.1 Placement	9
5.2 Wall Mounting (if using option-B)	9
<b>6. Connections</b>	<b>10</b>
6.1 Use the HDMI ARC Socket	10
6.2 Use the OPTICAL Socket	10
6.3 Use the AUX Socket	10
6.4 Connect Power	10
<b>7. Basic Operation</b>	<b>11</b>
7.1 Standby/ON	11
7.2 Automatic Power Off Function	11
7.3 Select Modes	11
7.4 Adjust the Bass Level	11
7.5 Adjust the Brightness	11
7.6 Select Equalizer (EQ) Effect	11
7.7 Adjust the Volume	11
<b>8. AUX / OPTICAL / HDMI ARC Operation</b>	<b>11</b>
<b>9. USB Operation</b>	<b>12</b>
<b>10. Bluetooth® Operation</b>	<b>12</b>
<b>11. Troubleshooting</b>	<b>13</b>
<b>12. Specifications</b>	<b>14</b>

# 1. Important Safety Instructions

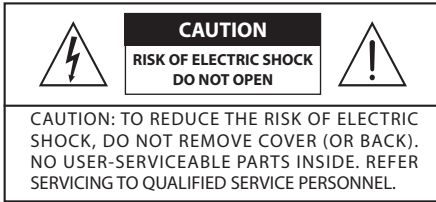



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude as to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

## 1.1 Safety

- 1 **Read these instructions** – All the safety and operating instructions should be read before this product is operated.
- 2 **Keep these instructions** – The safety and operating instructions should be retained for future reference.
- 3 **Heed all warnings** – All warnings on the appliance and in the operating instructions should be adhered to.
- 4 **Follow all instructions** – All operating and usage instructions should be followed.
- 5 **Do not use this apparatus near water** – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool and the like.
- 6 **Clean only with a dry cloth.**
- 7 **Do not block any ventilation openings.** Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12  Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13 Unplug the apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- 16 The apparatus shall not be exposed to dripping or splashing. No objects filled with liquids, such as vases, shall be placed on the apparatus.
- 17 Minimum distance around the apparatus for sufficient ventilation is 5cm.
- 18 The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc...
- 19 No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 20 Batteries should be recycled or disposed of as per state and local guidelines.
- 21 The use of apparatus in moderate climates.

## 1.2 Caution

- Use of controls or adjustments or performance of procedures other than those described herein, may result in hazardous radiation exposure or other unsafe operation.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus must not be exposed to dripping or splashing and objects filled with liquids, such as vases, must not be placed on apparatus.
- The mains plug/appliance coupler is used as the disconnect device, the disconnect device must remain readily operable.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

## 1.3 Warning

- The battery (batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
- Do not place this unit close to strong magnetic fields.
- Do not place this unit on the amplifier or receiver.
- If any solid object or liquid falls into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- Do not attempt to clean the unit with chemical solvents as this may damage the finish. Use a clean, dry or slightly damp cloth.
- When removing the power plug from the wall outlet, always pull directly on the plug, never yank on the cord.
- Changes or modifications to this unit not expressly approved by the party responsible for compliance will void the user's authority to operate the equipment.
- The rating label is pasted on the bottom or back of the equipment.

### **Battery usage CAUTION**

To prevent battery leakage which may result in bodily injury, property damage, or damage to the apparatus:

- Install all batteries correctly, + and - as marked on the apparatus.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (Carbon-Zinc) or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- Remove batteries when the unit is not used for a long time.



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



We hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Edenwood is under license. Other trademarks and trade names are those of their respective owners.

 


The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

## 2. What's in the Box




Main unit

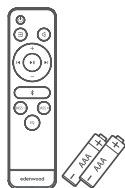


Remote control /  
AAA batteries x 2



 AC power cord x 1

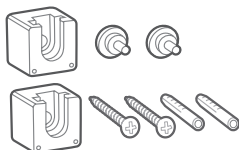

Wall mount kit

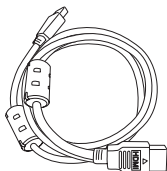 

HDMI cable



Instruction manual

 


3.5mm-3.5mm audio cable

- Power cord quantity and plug type vary by regions.
- Images, illustrations and drawings shown on this User Manual are for reference only, actual product may vary in appearance.





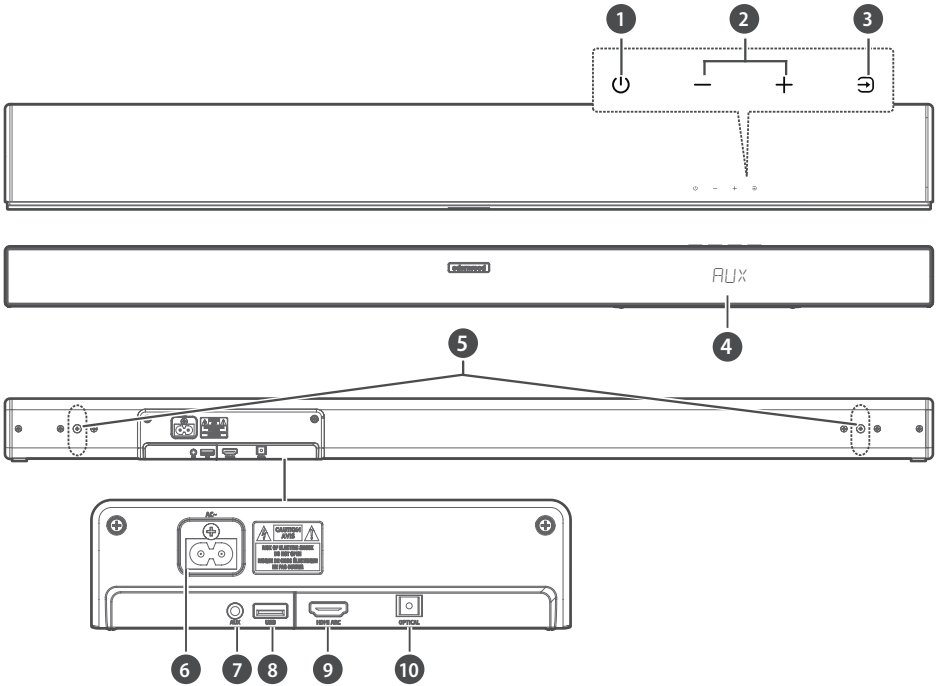



### 3. Identifying the Parts

 
#### 3.1 Main Unit



- ① **⏻ (ON/OFF) button**  
Press and hold this button for 3 seconds to switch the unit between ON and Standby mode.
- ② **+/- (VOL) buttons**  
Increase/decrease the volume level.
- ③ **↺ (SOURCE) button**  
Select the play function.
- ④ **Remote Control Sensor / Display Window**  
Receive signal from the remote control.  
Show the current status.
- ⑤ **Wall bracket screws**
- ⑥ **AC~ Socket**  
Connect a power cord.
- ⑦ **AUX Socket**  
Connect to an external audio device.
- ⑧ **USB Socket**  
Insert the USB device to play music.
- ⑨ **HDMI ARC Socket**  
The port supports the ARC HDMI feature, which allows the soundbar to play audio that originates on the connected TV.
- ⑩ **OPTICAL Socket**  
Use to connect the soundbar to a OPTICAL OUT socket on an external device.

### 3.2 Remote Control

- ①  Switch the unit between ON and STANDBY mode.
- ②  (SOURCE) Select the play function.
- ③  +/- (VOL) Increase/decrease the volume level.
- ④  BASS +/- Adjust bass level.
- ⑤  (MUTE) Mute or resume the sound.
- ⑥  |</>| Skip to previous/next track in Bluetooth/USB mode.
- ⑦  || Play/pause/resume playback in Bluetooth/USB mode.
- ⑧  (Bluetooth) Select the Bluetooth mode.  
Press and hold to activate the pairing function in Bluetooth mode or disconnect the existing paired Bluetooth device.
- ⑨ **EQ buttons** Select Equalizer (EQ) Effect.

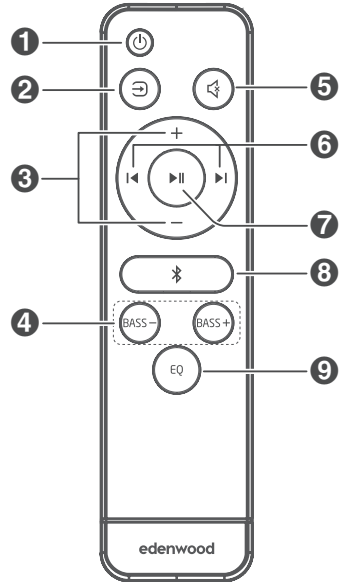


## 4. Preparations

### 4.1 Prepare the Remote Control

**IMPORTANT:** The remote control will work within a 6m range, however this may be impossible if there are obstacles between the unit and the control.

### 4.2 Install/replace the batteries

 - 1 Press and slide the back cover to open the battery compartment of the remote control.
- 2 Insert two AAA size batteries. Make sure the (+) and (-) ends of the batteries match the (+) and (-) ends indicated in the battery compartment.
- 3 Close the battery compartment cover.

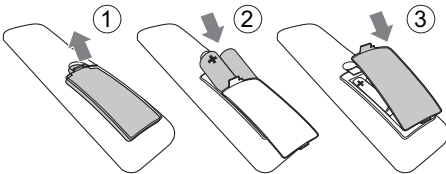

### 4.3 Precautions Concerning Batteries

- Be sure to insert the batteries with correct positive “⊕” and negative “⊖” polarities.

 
- Use batteries of the same type. Never use different types of batteries together.
- Either rechargeable or non-rechargeable batteries can be used. Refer to the precautions on their labels.
- Be aware of your fingernails when removing the battery cover and the battery.
- Do not drop the remote control.
- Do not allow anything to impact the remote control.
- Do not spill water or any liquid on the remote control.
- Do not place the remote control on a wet object.
- Do not place the remote control under direct sunlight or near sources of excessive heat.
- Remove the battery from the remote control when not in use for a long period of time, as corrosion or battery leakage may occur and result in physical injury, and/or property damage, and/or fire.
- Do not use any batteries other than those specified.
- Do not mix new batteries with old ones.
- Never recharge a battery unless it is confirmed to be a rechargeable type.



## 5. Placement and Mounting

### 5.1 Placement

- A If your TV is placed on a table, you can place the unit on the table directly in front of the TV stand, centered with the TV screen.
- B If your TV is attached to a wall, you can mount the unit on the wall directly below the TV screen.

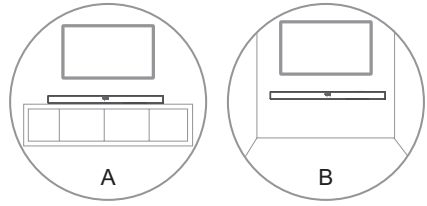


### 5.2 Wall Mounting (if using option-B)

- Installation must be carried out by qualified personnel only. Incorrect assembly can result in severe personal injury and property damage (if you intend to install this product yourself, you must check for installations such as electrical wiring and plumbing that may be buried inside the wall). It is the installer's responsibility to verify that the wall will safely support the total load of the unit and wall brackets.
- Additional tools (not included) are required for the installation.
- Do not overtighten screws.
- Keep this instruction manual for future reference.
- Use an electronic stud finder to check the wall type before drilling and mounting.

#### WARNING

- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- Suggested wall mounting height:  $\leq 1.5$  meters.

 1. Drill 2 parallel holes ( $\varnothing 5.5-6$  mm each according to wall type) in the wall. The distance between the holes should be **796** mm.
2. Firmly fix 1 dowel into each hole in the wall if necessary. Tighten the wall mount brackets on the wall with screws and screwdriver (not included). Make sure that they are securely installed.
3. Remove the screws at the back of the unit. Install the wall mounting screws into the back of the unit.
4. Lift the unit onto the wall mount brackets and slot into place.

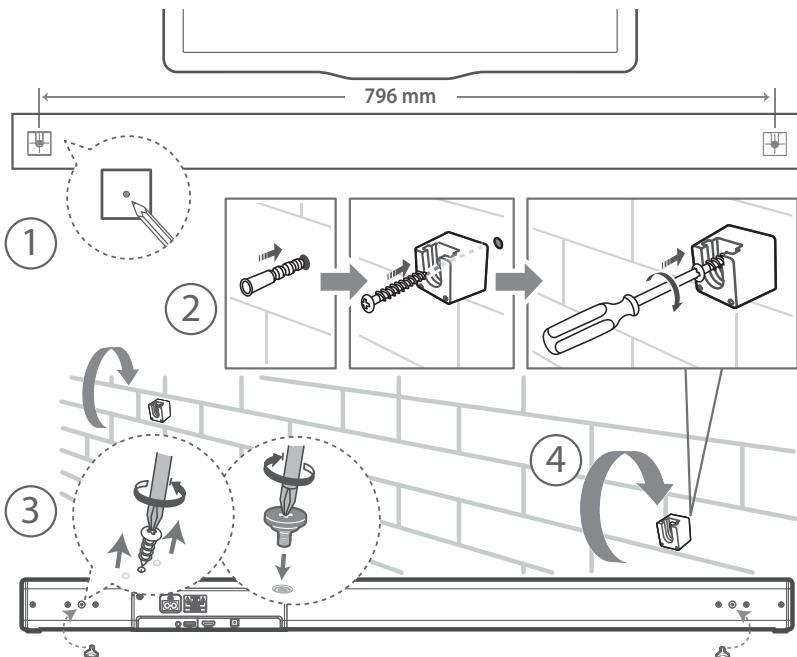


## 6. Connections

### 6.1 Use the HDMI ARC Socket

The ARC (Audio Return Channel) function allows you to send audio from your ARC-compliant TV to your soundbar through a single HDMI connection. To enjoy the ARC function, please ensure your TV is both HDMI-CEC and ARC compliant and set up accordingly. When correctly set up, you can use your TV remote control to adjust the volume output (VOL +/- and Mute) of the soundbar.

 
- Connect the HDMI cable from unit's HDMI ARC socket to the HDMI ARC socket on your ARC compliant TV. Then press the remote control to select HDMI ARC.

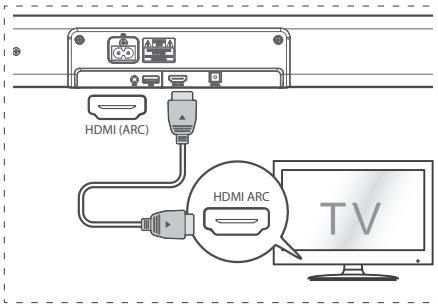

#### Tips:

- Your TV must support the HDMI-CEC and ARC function. HDMI-CEC and ARC must be set to On.
- The setting method of HDMI-CEC and ARC may differ depending on the TV. For details about ARC function, please refer to the owner's manual.
- Only HDMI 1.4 or higher version cable can support the ARC function.
 
### 6.2 Use the OPTICAL Socket

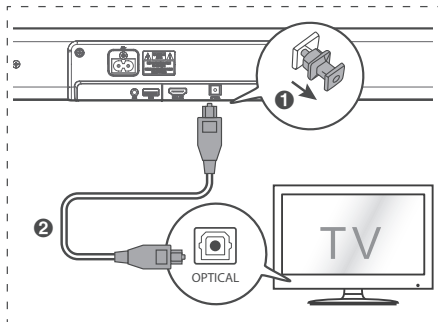


- Remove the protective cap of the **OPTICAL** socket, then connect an OPTICAL cable to the TV's OPTICAL OUT socket and the **OPTICAL** socket on the unit.

#### Tips:

 The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to **PCM** (Refer to the user manual of the input source device for its audio setting details) with HDMI / OPTICAL input.

### 6.3 Use the AUX Socket


- A. Use a 3.5mm to 3.5mm audio cable to connect the TV's or external audio device headphone socket to the **AUX** socket on the unit.

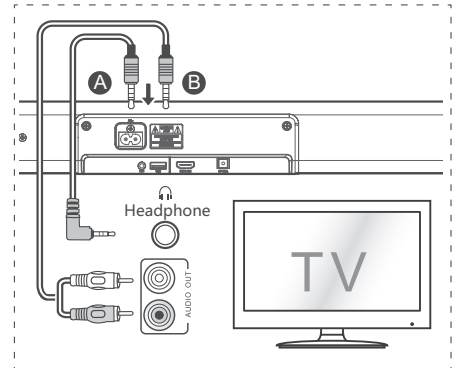

- B. Use a RCA to 3.5mm audio cable to connect the TV's audio output sockets to the **AUX** socket on the unit.

### 6.4 Connect Power

 
 


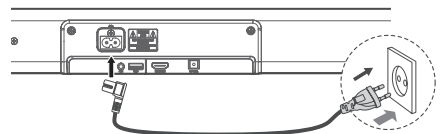- **Risk of product damage!** Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Before connecting the AC power cord, ensure you have completed all other connections.
- Connect the mains cable to the **AC~** Socket of the main unit and then into a mains socket.



## 7. Basic Operation

### 7.1 Standby/ON

When you first connect the main unit to the mains socket, the main unit will be in Standby mode.


- Press **and hold** the  button for **3 seconds** on the unit or press the  button on the remote control to switch the unit ON.
- Press **and hold** the  button for **3 seconds** on the unit or press the  button on the remote control again to switch the unit back to STANDBY mode.
- Disconnect the mains plug from the mains socket if you want to switch the unit OFF completely.

### 7.2 Automatic Power Off Function

The unit automatically turns to **Standby** mode after about 15 minutes if the TV or the external unit is disconnected, switched off or the volume is too close to mute.

- To switch the unit off completely, remove the mains plug from the mains socket.
- Please turn the unit off completely to save energy when not in use.

### 7.3 Select Modes

Press the  (SOURCE) button on the unit or on the remote control to select the **AUX, Bluetooth, OPTICAL, HDMI ARC** and **USB** mode. The selected mode will show on the display.

### 7.4 Adjust the Bass Level

- Press the **BASS +/-** buttons on the remote control to adjust bass level.  
(bass+3 ~ bass-3)



### 7.5 Adjust the Brightness

- When no operation for 10 seconds, the brightness of the screen will automatically dim the brightness. When operated again, the brightest level will be automatically restored.


### 7.6 Select Equalizer (EQ) Effect

Press the **EQ** button on the remote control to select your desired preset equalizer:  
**NEWS / MOVIE / MUSIC.**

### 7.7 Adjust the Volume

- Press the **VOL +/-** buttons on the unit or on the remote control to adjust the volume.
- If you wish to turn the sound off, press the  (MUTE) button on the remote control. Press the  (MUTE) button again or press the **VOL +/-** buttons on the unit or on the remote control to resume normal listening.

## 8. AUX / OPTICAL / HDMI ARC Operation

 
- 1 Ensure that the unit is connected to the TV or audio device.
- 2 Press the  (SOURCE) button on the unit or on the remote control to select the **AUX, OPTICAL, HDMI ARC** mode. The selected mode will show on the display.
- 3 Operate your audio device directly for playback features.
- 4 Press the **VOL +/-** button to adjust the volume to your desired level.

 
 

#### Tip:

The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect. Ensure that the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to **PCM** (Refer to the user manual of the input source device for its audio setting details) with HDMI / OPTICAL input.

## 9. USB Operation

By connecting a USB mass storage device (e.g. USB flash drive) to this unit, you can enjoy the device's stored music through the unit.

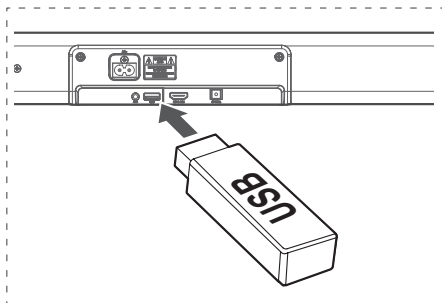

- 1 Insert the USB device.
- 2 Press the  button on the unit or on the remote control to select **USB** mode.
- 3 During playback:
  - To pause/resume playback, press  button.
  - To skip to a track, press the  button.





- The player supports the USB music file format of MP3 only.
- The Soundbar can support USB devices with up to 32 GB of memory.
- The Soundbar may not be compatible with all USB devices, this is not an indication of a problem with the unit.


## 10. Bluetooth® Operation

 Pairing the unit with a Bluetooth® device to listen to music:


### First time pairing

- 1 Press the  button on the unit or  button on the remote control to select Bluetooth® mode. The display will show **NO BT**.
- 2 Activate your Bluetooth® device and select the search mode. "**TB122B**" will appear on your Bluetooth® device list.
- 3 Select "**TB122B**" enter "0000" for the password if necessary. The unit will voice "Paired" and the display will show **BT**.

### Pairing a new device after first time pairing

- 1 In Bluetooth® mode, press and hold the  button to clear all pairing. The unit will enter pairing mode. The unit will voice "Pairing" and the display will show "**PAIR**".
- 2 Follow step 2-3 to pair your Bluetooth® device.

### To disconnect the Bluetooth function, you can:

 


- Switch to another function on the unit.
- Disable the function from your Bluetooth device.
- Press and hold the  button on the remote control. The Bluetooth® device will be disconnected from the soundbar after the "Pairing" voice prompt.

The display will show PAIR, and the unit is now ready for pairing. Follow step 2-3 in "First time pairing" above to pair your Bluetooth® device.

### Listen to Music from Bluetooth® device

If your Bluetooth® device supports A2DP, play music via your device.

If your Bluetooth® device supports AVRCP, use the supplied remote control to control play.


- To increase/decrease the volume, press **VOL**  button.
- To pause/resume playback, press  button.
- To skip to a track, press .



- The operational range between the Soundbar and the device is approximately 8 metres.
- Before connecting a Bluetooth® device to the unit, ensure you know the device's capabilities.
- Compatibility with all Bluetooth® devices is not guaranteed.
- Any obstacle between the device and the Soundbar can reduce operational range.
- Keep this player away from other electronic devices that may cause interference.
- The player will also be disconnected when your device is moved beyond the operational range.

# 11.Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this unit, check the following points before requesting service.

Problem	Solution
<b>No power</b>	<ul style="list-style-type: none"> <li>• Ensure that the AC cord of the apparatus is properly connected .</li> <li>• Ensure that there is power at the AC outlet.</li> <li>• Press ⏻ (standby) button to turn the unit on.</li> </ul>
<b>Remote control does not work</b>	<ul style="list-style-type: none"> <li>• Before you press any playback control button, first select the correct source.</li> <li>• Reduce the distance between the remote control and the unit.</li> <li>• Insert the battery with its polarities (+/-) aligned as indicated.</li> <li>• Replace the battery.</li> <li>• Aim the remote control directly at the sensor on the front of the unit.</li> </ul>
<b>No sound</b>	<ul style="list-style-type: none"> <li>• Make sure that the unit is not muted. Press  (MUTE) or VOL +/- button to resume normal listening.</li> <li>• Press ⏻ button on the unit or on the remote control to switch the soundbar to standby mode. Then press the ⏻ button again to switch the soundbar on.</li> <li>• Ensure the audio setting of the input source (e.g. TV, game console, DVD player, etc.) is set to PCM or Dolby Digital mode while using digital (e.g. HDMI, OPTICAL) connection.</li> <li>• The unit may not be able to decode all digital audio formats from the input source. In this case, the unit will mute. This is NOT a defect.device is not muted.</li> <li>• If using Bluetooth, ensure that the volume on your source device is turned up and that the device is not muted.</li> </ul>
<b>TV has display problem while viewing HDR content from HDMI source.</b>	<ul style="list-style-type: none"> <li>• Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV.</li> </ul>
<b>I can't find the Bluetooth name of this unit on my Bluetooth device for Bluetooth pairing</b>	<ul style="list-style-type: none"> <li>• Ensure the Bluetooth function is activated on your Bluetooth device.</li> <li>• Re-pair the Soundbar with your Bluetooth device.</li> <li>• The Soundbar has a Bluetooth® function that can receive a signal within 8 metres. Keep a distance within 8 metres between the Soundbar and your Bluetooth® device.</li> </ul>
<b>The Soundbar turns off</b>	<ul style="list-style-type: none"> <li>• When the Soundbar's external input signal level is too low, the Soundbar will be automatically turn off after 15 minutes. Please increase the volume level of your external device.</li> </ul>

## 12. Specifications

Brand	Edenwood
Model	XXXXXX

### Soundbar

Power Supply	AC 100-240V~ 50/60Hz
Power Consumption	25 W < 0.5 W (StandBy)
Speakers Impedance	8Ω x 2
USB	5V = 500mA Hi-Speed USB (2.0) / FAT32 / FAT16 32G (max), MP3
Dimension (WxHxD)	944 x 64 x 106 mm
Net weight	2.8 kg
Audio input sensitivity	500mV
Frequency Response	40Hz - 20KHz

### Wireless Specification

Bluetooth version / profiles	V 5.1 (A2DP, AVRCP)
Bluetooth frequency range	2402 MHz ~ 2480 MHz
Bluetooth Max. transmitting power (EIRP)	< 10 dBm

### Amplifier (RMS Output power)

Total	60 W
Main Unit	15 W x 2 + 30 W

### Remote Control

Distance/Angle	19.7 feet (6m) / 30°
Battery type	AAA (1.5V x 2)

- Design and specifications are subject to change without notice.



**edenwood**