



TWS Bluetooth Wireless Earphones EN

Safety instructions

Please read this user manual carefully before using the unit. Keep these instructions for future reference.

Should the unit be given to someone else, please include this user manual too.

- Only use the unit as described in this user manual. Any mishandling or unintended use with regards to this user manual will relieve the manufacturer or retailer of any liability.
- Warning!** Failure to follow the safety and operating instructions may result in a risk of electric shock, fire and/or injury to persons.
- Never use accessories or parts from another manufacturer, as this will automatically null and void the guarantee and could damage the unit and/or cause injury. Only use manufacturer-recommended accessories.
- This unit must not be used by people (including children under the age of 8) with reduced physical, sensory or mental capacities, or people with no experience of using or knowledge of the unit, unless they can be supervised or receive prior instruction regarding how to safely use the unit and understand the risks involved.
- Make sure children do not play with any part of the unit.
- Ensure that the unit and its charging cable are kept out of the reach of children.
- Do not drop, knock or shake the unit.
- This unit has been designed exclusively for domestic and indoor use in temperate climates. High temperatures can damage the earphones' performance and reduce the battery's lifespan. Exposure to low and then warmer temperatures can cause condensation that may damage the electronic circuits.
- Do not place the unit or the charging cable:
 - near sources of naked flames;
 - in direct contact with sunlight;
 - near heat sources, such as radiators;
 - near or on other significant heat-generating equipment, such as a stereo;
 - in places subject to vibrations;
 - in damp places or locations where it may be exposed to water.

- Exposure to water can cause serious damages. Unplug the charging cable immediately and consult your dealer.
- Always keep the unit dry. The earphones are not waterproof.
- Before connecting the unit to the mains, check:
 - that the unit and charging cable are not damaged. If damaged, do not use them and take the product to your retailer for repair.
 - that the voltage of the power source and the rated voltage correspond to the specifications found on the unit's nameplate.
- Warning!** The unit must only be charged using the supplied charging cable.
- Risk of electrocution!** Do not try to disassemble or repair the unit yourself. Do not insert any foreign objects into the unit. None of the unit's interior components should be repaired by the user. Repairs should only be carried out by qualified personnel.
- Warning! High sound pressure!** Listening to very loud music can damage your hearing. Avoid listening to very loud music for extended periods of time.
- Using earphones will impair your ability to hear other sounds. Use caution when wearing your earphones and simultaneously performing any activity that requires your full attention. Using earphones when driving is not recommended and in some countries, it may even be illegal.
- This product contains magnetic material. If you have a pacemaker or any other electrical medical device, you should consult your doctor before using this product.
- For the cleaning, maintenance and storage instructions, refer to the relevant paragraphs of this user manual.

Rechargeable batteries

- The unit contains a non-replaceable internal lithium battery.
- To ensure optimum battery performance, use the product in locations that have an ambient temperature.
- Do not recharge the battery for longer than specified. Overcharging the battery will shorten its lifespan and useful life.
- Do not expose the battery to heat sources, such as sunlight or naked flames. Do not place the unit on top of other heat-emitting appliances, such as radiators or fridges.
- Do not throw batteries into a fire as they could burst or release toxic substances.
- The misuse of batteries can lead to the risk of explosion!
- The rechargeable battery must be removed by a qualified technician. Always unplug the charging cable from the unit before removing the battery.
- In the event of a leak, avoid any contact with the skin, eyes and mucous membranes. Do not attempt to remove the rechargeable battery. Use a cloth or safety gloves when disposing of the unit. Dispose of the unit and rechargeable battery in accordance with current local regulations.

USB TYPE-C is a trademark of USB Implementers Forum, Inc. Siri and iOS are trademarks of Apple Inc. Google Assistant and Android are trademarks of Google LLC.

Parts

- | | |
|-----------------------------------|---|
| A. Earphones LED indicator | F. Charging contacts (in the bottom of the case) |
| B. Microphone | G. Charging case LED indicator |
| C. Charging pins | H. Type-C charging port |
| D. Left/Right earphone tap | I. USB C-type charging cable |
| E. Charging case lid | |

Product overview and usage

- Unpack the product. Remove all the labels from the product. Check that it is complete and in a good condition. If the unit is damaged or faulty, do not use it and take it to your retailer or after-sales service centre.
- Keep all packaging out of the reach of children. There is a risk of accidents if children play with packaging materials.
- RISK OF SUFFOCATION! KEEP OUT OF THE REACH OF CHILDREN** – This product has small parts that may pose a choking or suffocation risk, if swallowed. Keep all the packaging and small parts out of the reach of babies and children.
- This product is for domestic use only. It has not been designed for industrial or professional use. Any other use may damage the product or cause injury.

Specifications

Model:	980224 & 981196
Protection class:	Class III (not required to be electrically earthed)
Built-in rechargeable batteries:	Lithium-ion, 1 x 3.7 V/230 mAh
- Charging case	Lithium-ion, 2 x 3.7 V/30 mAh
- Earphones	
Charging cable:	USB Type-C, 17.2 cm

Charging voltage:	DC 5 V, 230 mA (Charging case) DC 5 V, 30 mA (Earphones)
Operating voltage:	3.0-4.2 V (Charging case) 3.2-4.2 V (Earphones)
Charging time:	Approx. 2 hours (Charging case) Approx. 1.5 hours (Earphones)
Operating time for audio playback:	Approx. 4 hours at maximum volume.
Operating time for phone calls:	Approx. 2.5 hours at 100% volume
Standby time:	180 days
Bluetooth version:	5.3
Bluetooth profiles:	A2DP/AVRCP/HSP/HFP
Bluetooth name:	HIGHONE TWS H01
Bluetooth frequency:	2.402-2.480 MHz
Bluetooth range:	Up to 10 metres (unobstructed)

Maximum power transmitted via Bluetooth:	2,197dBm
Operating temperature:	0 - 40°C
Product dimensions:	
- Charging case (W x H x D)	46 x 40 x 11 mm
- Earphones (each)	16.5 x 31 mm
Earphones	
Speaker power output:	2 x 3 mW RMS
Impedance:	32 Ohms

Compatibility disclaimer

Wireless performance is dependent on your device's Bluetooth wireless technology. Please check with the manufacturer. ELECTRO DÉPÔT cannot be held responsible for any data loss or leaks resulting from the use of these devices.

Declaration of conformity

In this document, ELECTRO DÉPÔT declares that this unit complies with the essential requirements and other relevant provisions of Directive 2014/53/EU. The declaration of conformity can be viewed on the following website: <http://www.electrodepot.fr/sav/notices/>

Wearing the earphones

- Insert the Left and Right earphones into the corresponding ears.
- Gently twist the earphones to adjust the fit and secure them in your ears. They should feel snug and comfortable.
- During phone conversations, turn the microphone slightly towards your mouth for a clearer conversation.

Charging the earphones

Before first use, fully charge the earphones and charging case with the USB Type-C charging cable (provided) for 2 hours. Thereafter, it will take approximately 1.5 to 2 hours to fully charge the charging case and/or earphones. Recharge the unit whenever the battery is low.

- Put the earphones in the charging case.
- Close the lid. The earphones will turn off and start charging automatically.
- Connect the USB end of the charging cable to a USB port on a computer, laptop, or USB charging plug adaptor.
- Connect the USB-C end of the charging cable to the USB-C charging port on the bottom of the charging case.
- Once the charging case and earphones are fully charged, unplug the USB Type-C charging cable.

LED Indicator lights	Description	Status
White	Flashes for 10 seconds and then turns off.	Low battery
Red	Flashes	Charging
Red	Solid NOTE: When the charging cable is removed from the charging case, the red light will turn off.	Fully charged
Earphones		
-	Alert sound	Low battery

White	Solid	Charging
	NOTE: When the earphones are fully charged, the charging case white indicator light will turn off.	
White	Off	Fully charged
White	Flashing	Pairing mode
White	1 earphone flashing slowly and 1 earphone flashing quickly.	Paired



- NOTE:**
- A fully charged case can charge the earphones **up to 4 times** before needing to be recharged.
 - A full charge on the earphones can provide approximately 4.5 hours of use when the volume is at 60%.
 - Always close the charging case lid when charging the earphones and ensure the charging case has sufficient power.
 - The charging case can be charged on its own or with the earphones inserted for simultaneous charging. If the charging case has battery power, you can insert the earphones for recharging without the USB Type-C charging cable being connected.
 - To prolong battery life, please recharge the earphones every 2 weeks if they have not been used.

Turning the earphones on/off

- Open the lid and remove the earphones from the charging case. The earphones will turn on automatically and the white earphones' LED indicator will flash quickly as they turn on and automatically searching for a Bluetooth device.
- Put the earphones into the charging case and close the lid. The earphones will turn off and start charging automatically.

Pairing with a Bluetooth device

To connect the earphones to a Bluetooth device you must first pair the earphones with the device (such as your smartphone, tablet, or computer).

To use the Left and Right earphones in True Wireless Stereo (TWS) mode, pair both earphones with the Bluetooth device. If you want to pair only one earphone with the Bluetooth device (Mono mode), pair the Left or Right earphone only.



- NOTE:** If the Bluetooth device was previously paired with another device, you may need to delete/forget that pairing from the Bluetooth device before attempting to pair it with the earphones.

Pairing both earphones (TWS mode) with a Bluetooth device

- Make sure that the earphones are sufficiently charged.
- Turn on Bluetooth in Settings on your Bluetooth device.
- Hold the charging case next to your Bluetooth device and remove the earphones from the case to turn them on. The earphones will turn on and automatically enter **Pairing mode** if they are not paired with another device. The LED indicators on the earphones will flash white. The **Pairing mode** is available for 5 minutes.
- On your Bluetooth device, search for "HIGHONE TWS H01" in the list of discoverable Bluetooth devices and select it to connect.
- Once the earphones have been successfully connected to the Bluetooth device, 1 earphone will flash slowly while the other earphone will flash quickly every 10 seconds. You will hear a prompt tone. The earphones are ready to use.
- If the earphones are not successfully paired within 10 minutes, they will turn off. Repeat the pairing process to try again.
- Once the Bluetooth pairing process has been successful, the connection will be automatic the next time you enable Bluetooth on your paired device and the earphones are turned on within a 10-metre range.
- After turning the earphones on, if the earphones cannot find the paired device within a few seconds, the earphones will automatically switch to **Pairing mode** for 10 minutes and then turn off if no connection is established.



- NOTE:** When both earphones are connected to your Bluetooth device, even if you decide to put the Left or Right earphone back into the charging case, you will still be able to continue using the remaining earphone without interruption.

Resetting the TWS pairing

If you cannot pair the earphones, you can reset them. Resetting the earphones clears any previous Bluetooth connections.

- Take one of the earphones out of the charging case.
- When the white LED indicator flashes quickly, tap and hold the earphone **CONTROL** button for 6 seconds until the white LED indicator turns off.
- Return the earphone to the charging case.
- Repeat steps 1-3 above with the other earphone.
- On your Bluetooth device/phone, remove the old "HIGHONE TWS H01" connection as it will no longer work. Then reconnect the earphones to your Bluetooth device as shown in the PAIRING WITH A BLUETOOTH DEVICE section.

Pairing one earphone (Mono mode) with a Bluetooth device

To pair only one earphone with your Bluetooth device, remove only the earphone of your choice (Left or Right) from the charging case and follow the Bluetooth pairing process above to pair the earphone. The remaining earphone should be turned off in the case.

Using the earphones

After you have successfully paired the earphones with a Bluetooth device:

- Enable Bluetooth on the paired Bluetooth device, such as your smartphone.
- Remove the earphones from the charging case to turn them on. The earphones will beep once when connected to the Bluetooth device.
- Use the volume controls on your Bluetooth device to adjust the volume. Before wearing the earphones, always set the volume to a safe level.
- Use the controls on your Bluetooth device or the **CONTROL** buttons on the earphones to control music playback, answer calls or use the voice assistant:

Function	CONTROL button	
	TWS mode	Mono mode
Playing music:		
Play/Pause a track	Double tap (L/R)	Double tap
Play the next track	Tap and hold for 2 seconds (R)	Tap and hold for 2 seconds (R)
Return to the start of the track	Tap and hold for 2 seconds (L)	Tap and hold for 2 seconds (L)
Play previous track	Triple press, then long press (L)	Triple press, then long press (L)
Taking a call:		
Answer a call	Double tap (L/R)	Double tap
End a call	Double tap (L/R)	Double tap
Reject a call	Tap and hold for 2 seconds (L/R)	Tap and hold for 2 seconds
Voice assistant:		
Activate voice assistant	Tap 3 times (L/R)	Tap 3 times
Deactivate voice assistant*	Tap 3 times (L/R)	Tap 3 times (L/R)

- * This function is available for Android devices.
- The voice assistant function works with Siri and Google Assistant on iOS and Android devices. Refer to your device/smartphone's user manual to enable the voice assistant before using this function.



- NOTE:**
- While listening to music, playback will automatically pause as soon as you remove one earphone from your ear and continue when you put it back in again.
 - The earphones will automatically turn off if they are not used for **3 minutes** while connected to the Bluetooth device. To awaken the earphones, tap the **CONTROL** button once.

Cleaning and maintenance



- WARNING!**
- Before cleaning, always unplug the charging cable from the charging case to disconnect the unit from the mains supply.
 - Never immerse the earphones, charging case or charging cable in water or any other liquid. Never rinse them under the tap.

- Clean the unit regularly to avoid dust build-up and prolong its service life.
- Wipe the earphones and charging case with a soft, slightly damp or dry cloth. Make sure that no liquid enters the unit.

